
 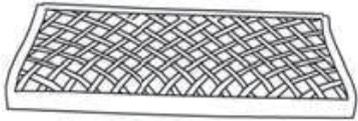



A	B	C	D
			
1PC	1PC	1PC	1PC

E	F	G	H	I	J	K	L	M	N
									
M8X32	M8	8 mm	8 mm	M6X30	M6	6 mm	6 mm	6 mm	
4PCS	4PCS	4PCS	4PCS	4PCS	4PCS	4PCS	4PCS	4PCS	2PCS



STEP 1

Remove the screws and nuts on the backrest(A) and armrest(C & D) first.

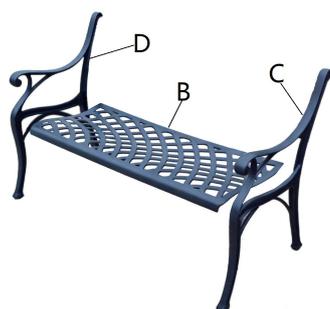

STEP 2

Then remove the screws and nuts on the seat(B) and armrest(C & D).