



#### STEP 1

Unscrew the cap counterclockwise.

#### STEP 2

Remove the screw connecting the crown and pole, and separate the crown from pole.

#### STEP 3

Remove the screw in runner, and separate ribs from runner.

#### STEP 4

Unscrew the rib end and remove the cover.

#### STEP 5

Remove the screw in crank house and separate the set.