

Brafab






SKULE Relax Chair - Art nr 9303 1 / 5

Assembly instruction




100








kg

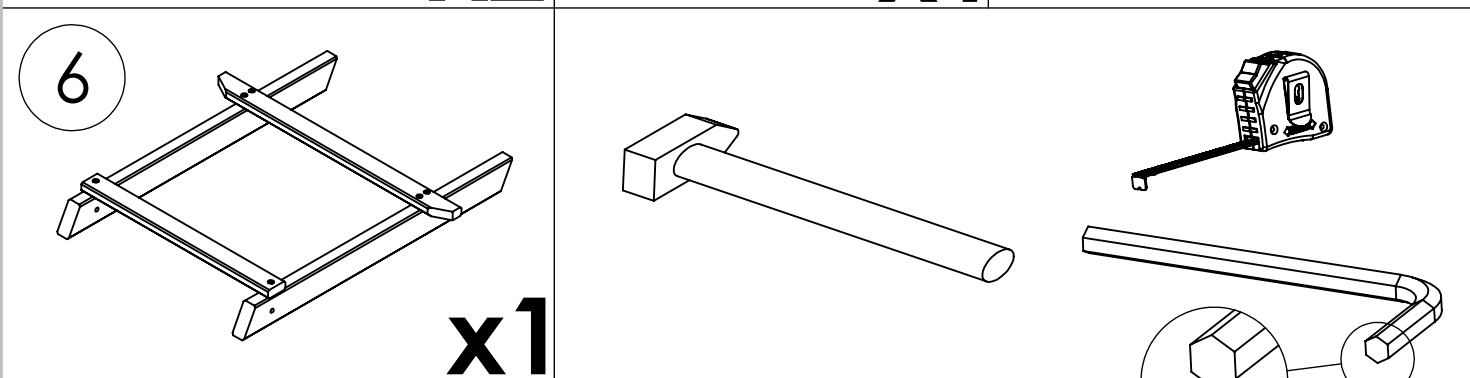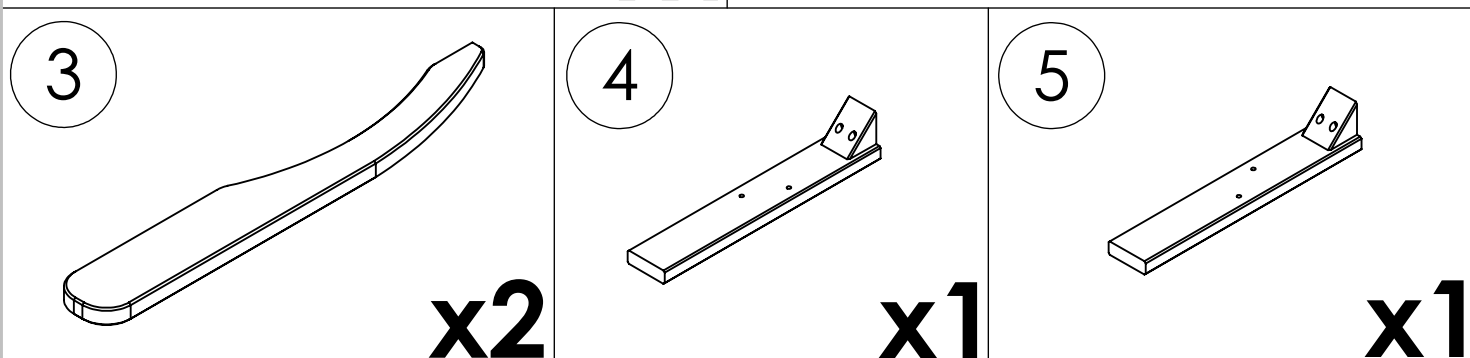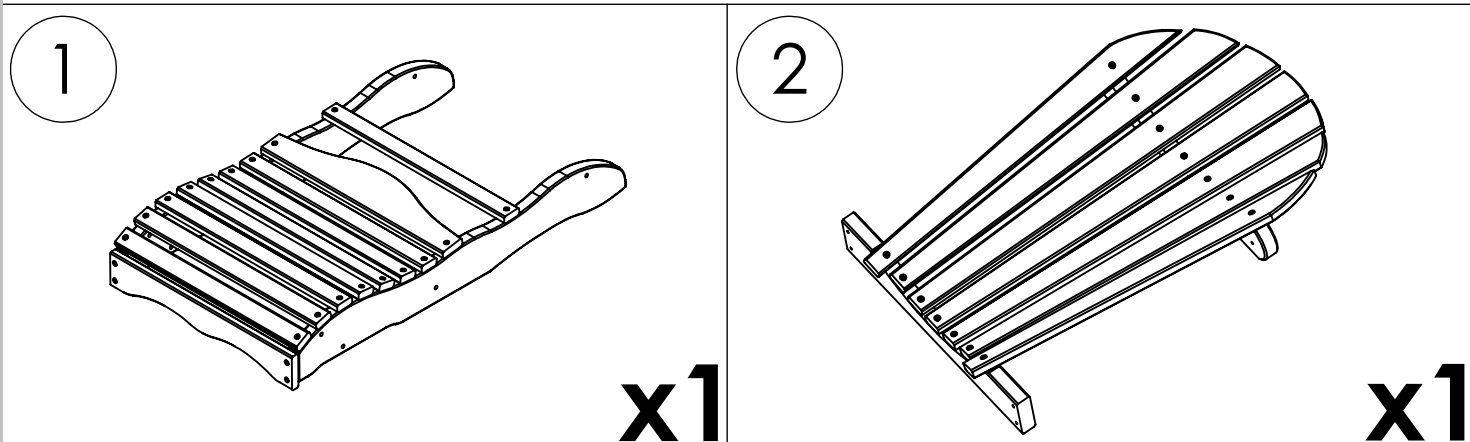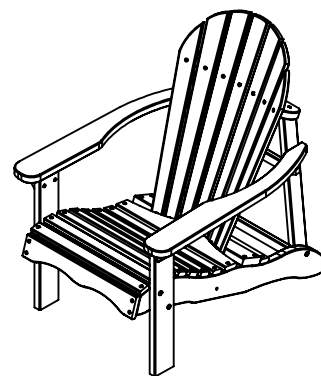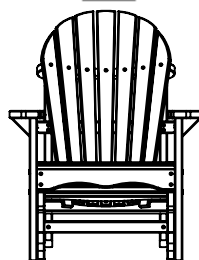

A		M6x55	x6
B		M6	x6
C		4x50 T	x8
D		5x50 T	x4







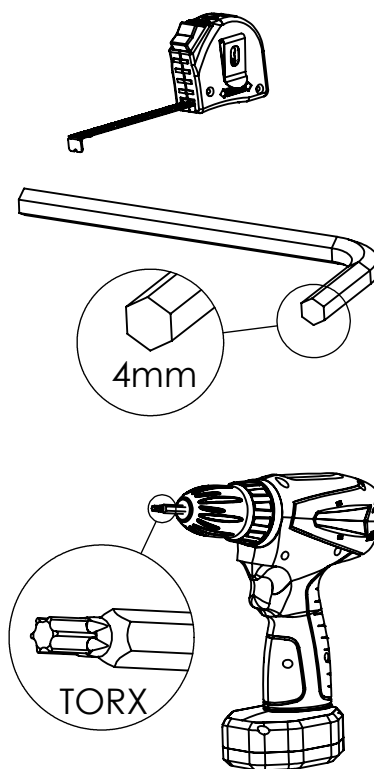


1

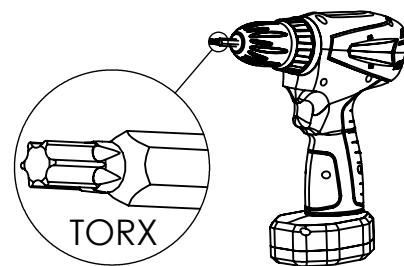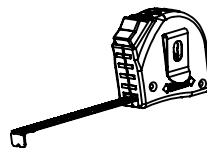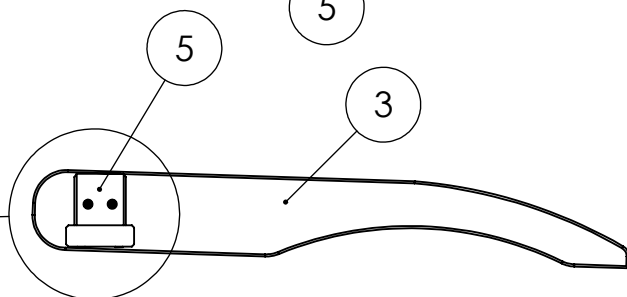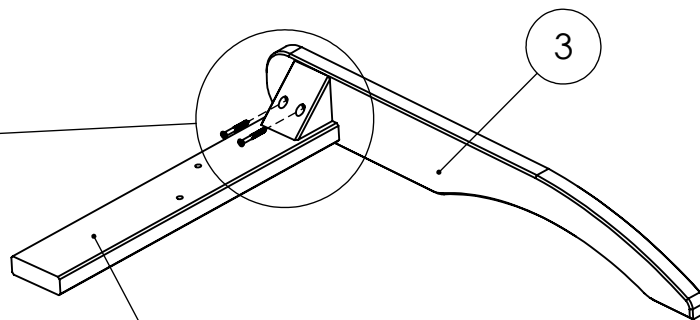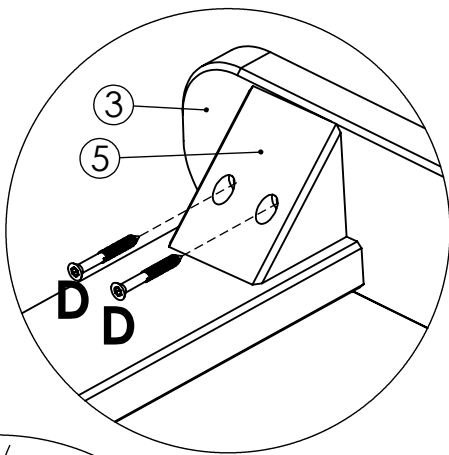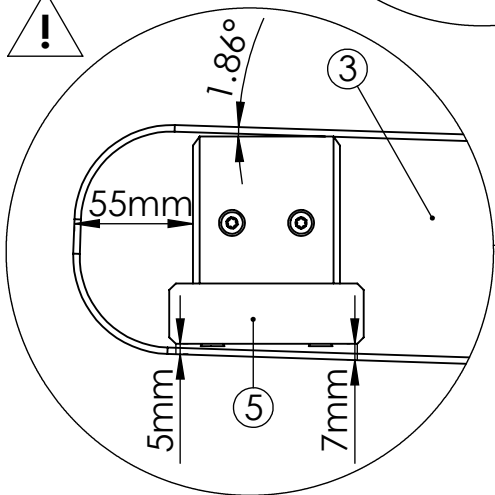


5x50 T x2


2

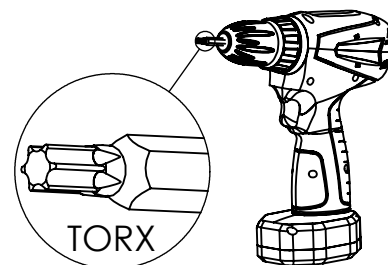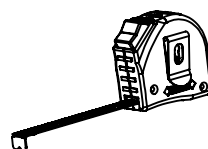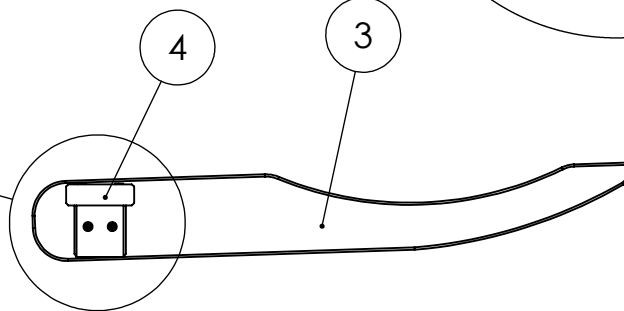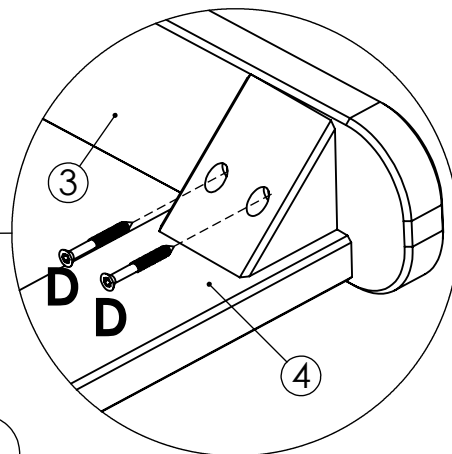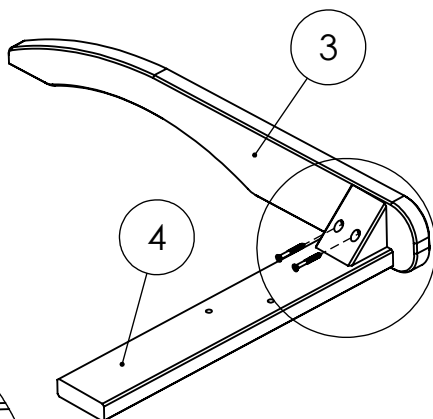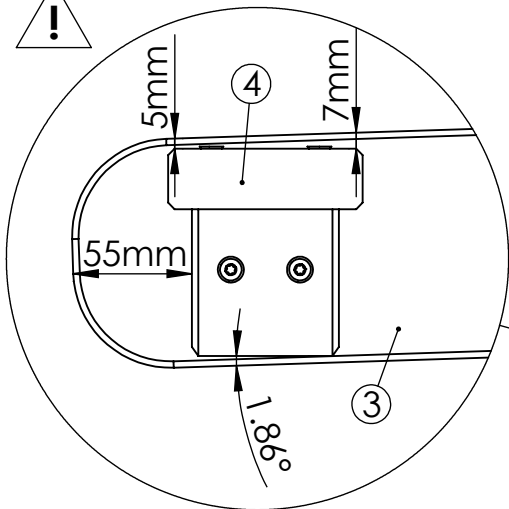

5x50 T x2

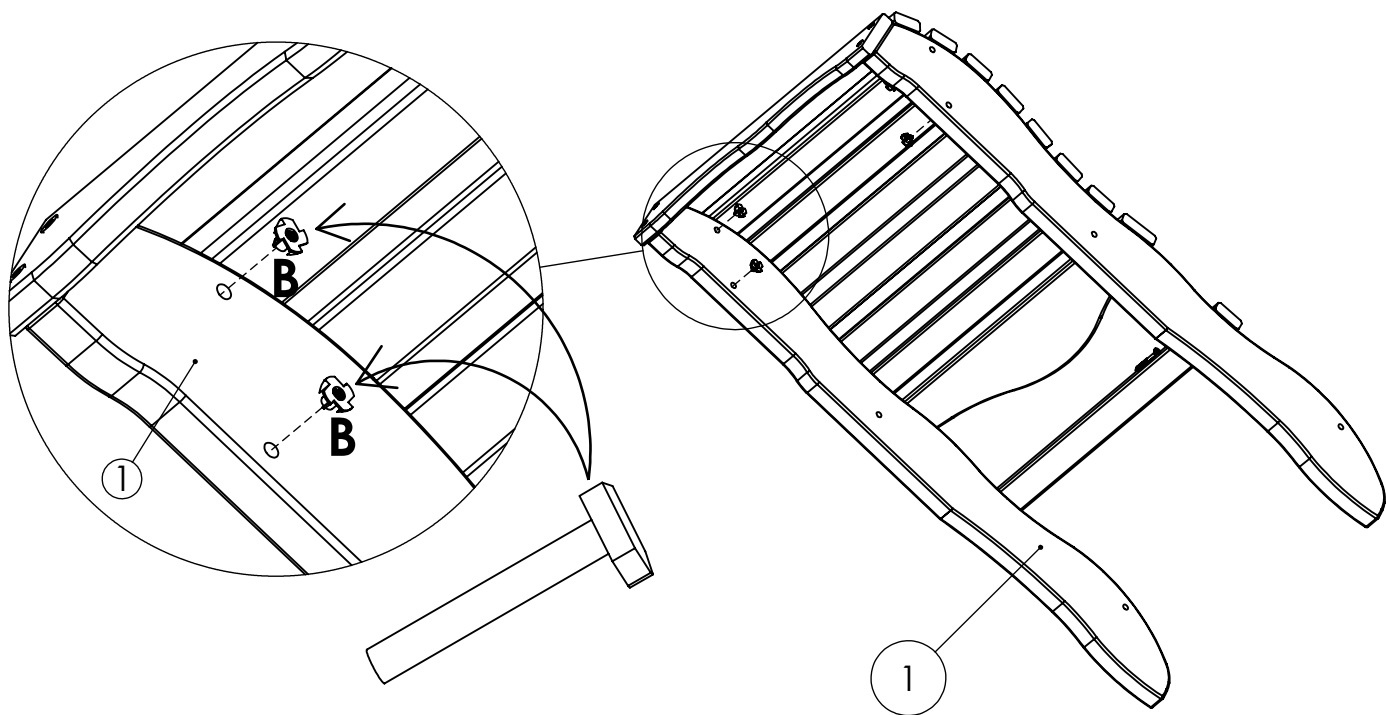



B		M6	x4
----------	--	-----------	-----------

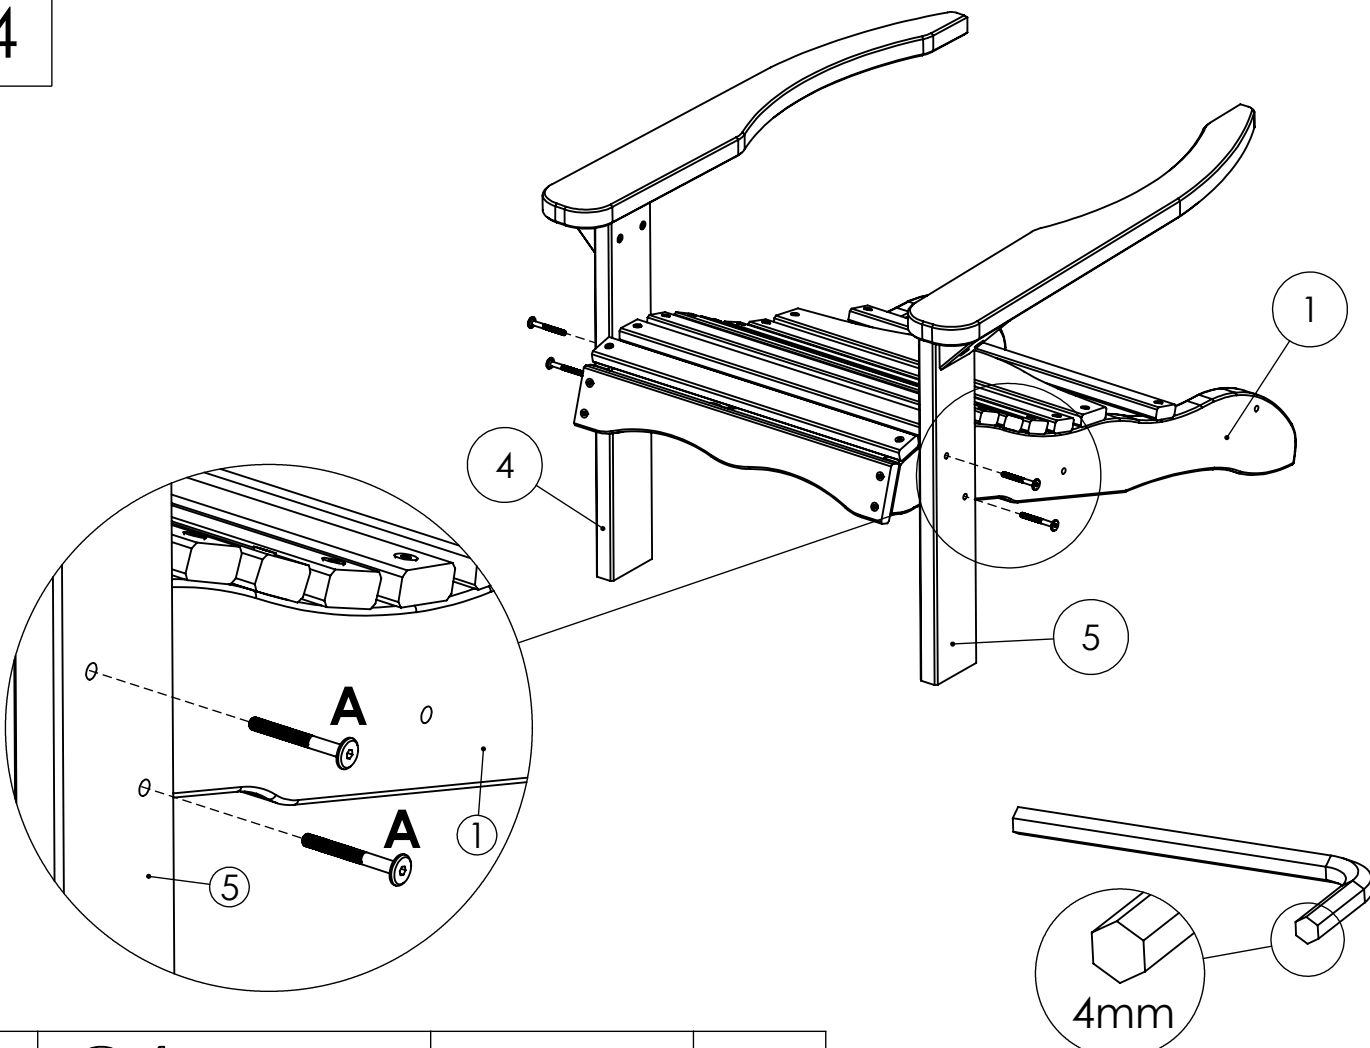

A		M6x55	x4
----------	---	--------------	-----------










5



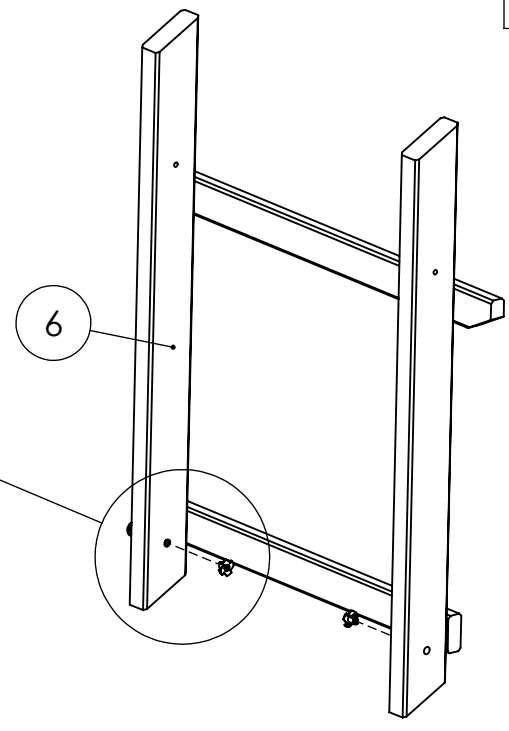
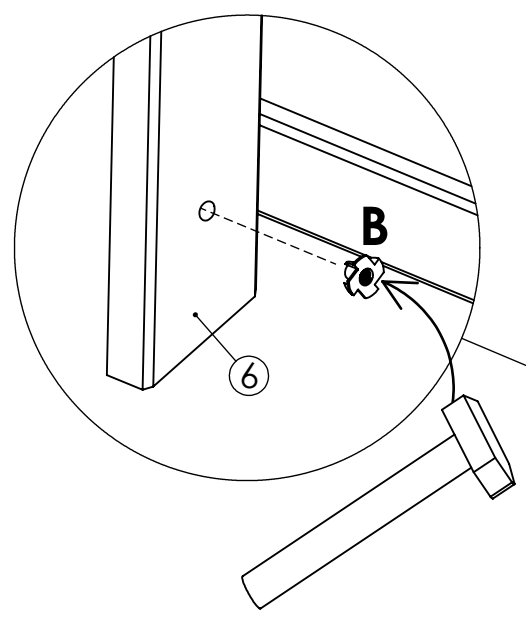


B		M6	x2
----------	---	-----------	-----------

6

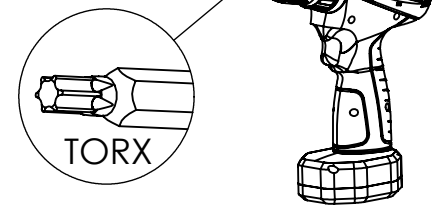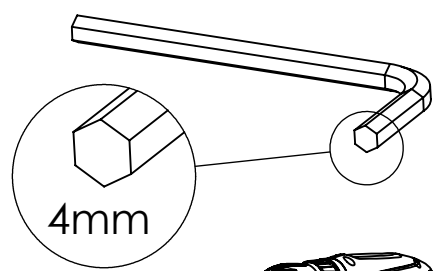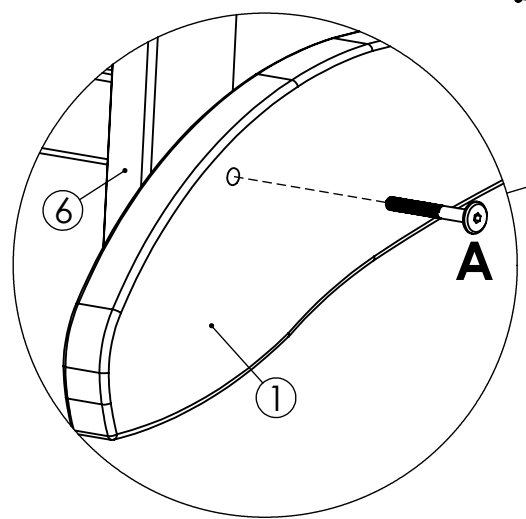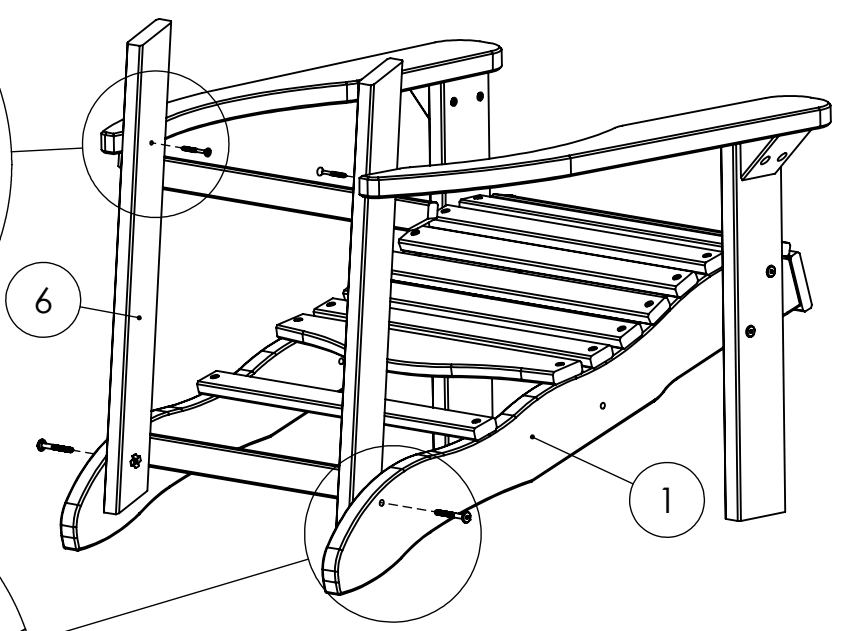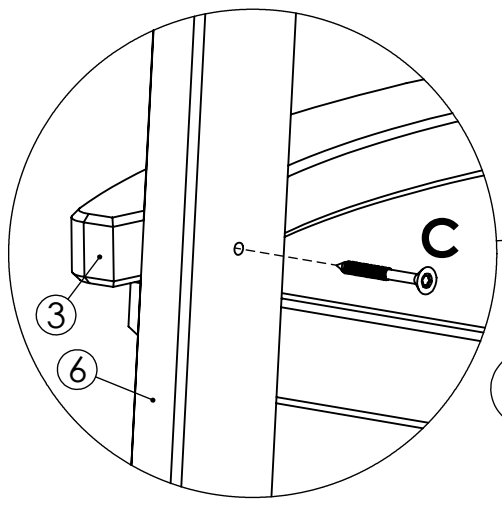

A		M6x55	x2
C		4x50 T	x2

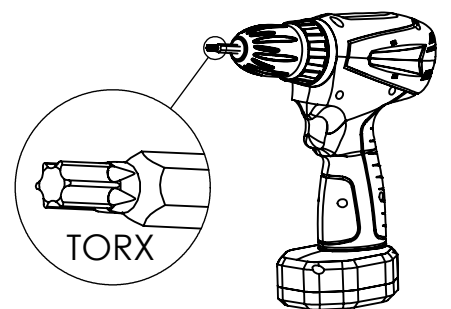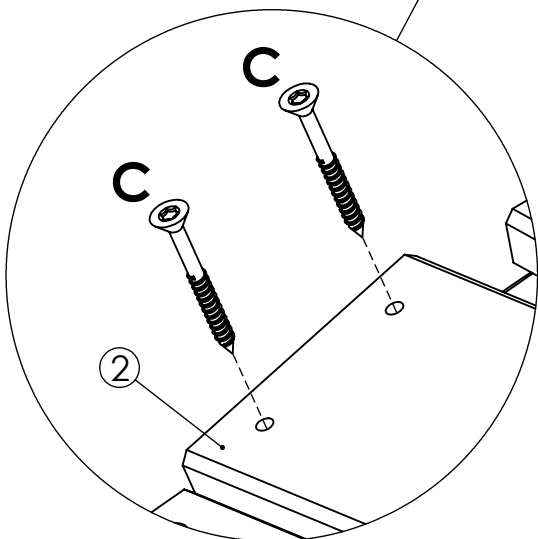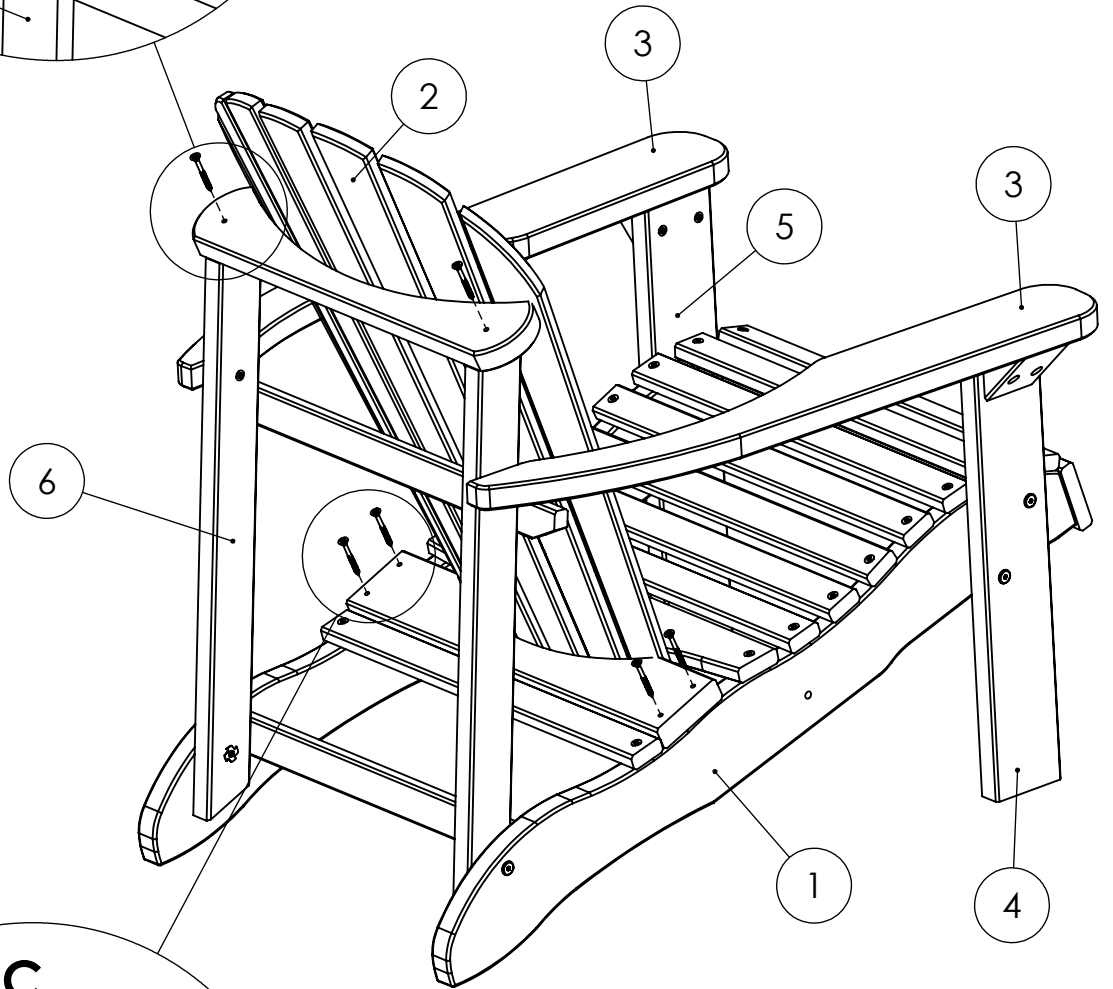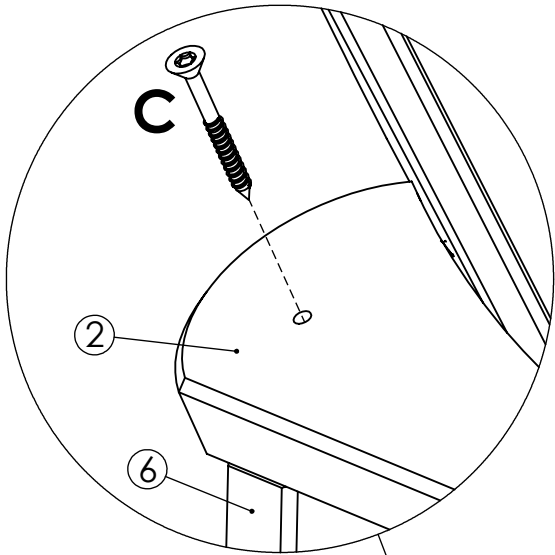

C



4x50

x6