


We recommend two people be on hand for this assembly

- Tools required :
- 4mm allen key (included)
 - Wood Block (included)

GOTLAND 3-SEAT SOFA

ASSEMBLY INSTRUCTION


①

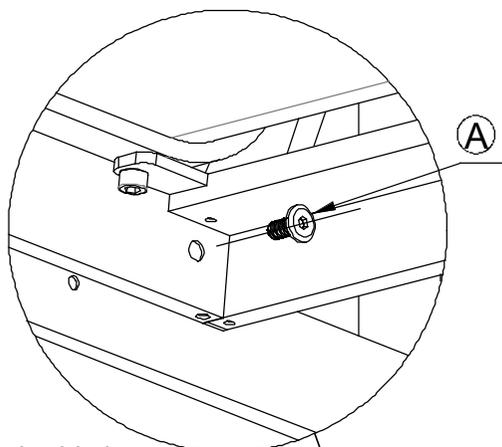

A

Abrasion may damage the fabric. Do not place it on an abrasive surface such as a concrete floor

D

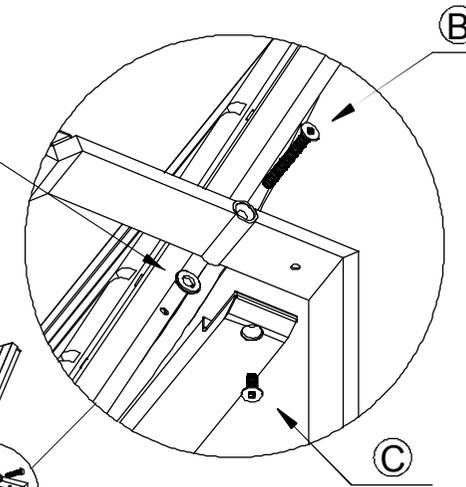

B


C

1. Line the seat/back assembly up with the 6 holes in the two side frames, two in the side of the arms and two on the underside of the arms.


2. Loosely secure the side frames to the seat starting with the M6x50 mm bolts for the arms (do not leave out the two PE washers), then starting from the rear of the seat and working towards the front, loosely secure the JCBC M6x15mm and Flat Head M6x15mm bolts in place.

3. Tighten all bolts fully


4. Check the levelness of the assembled sofa on a flat surface. if the frame is not completely level, then place the supplied wood block under one of the two legs that is in contact with the floor and gently push down on opposite two legs.

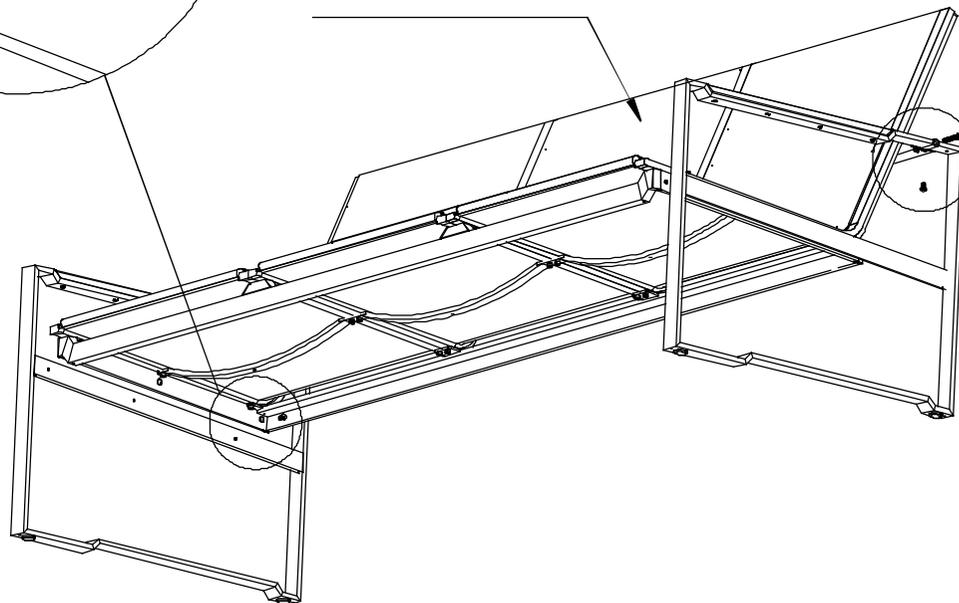

②

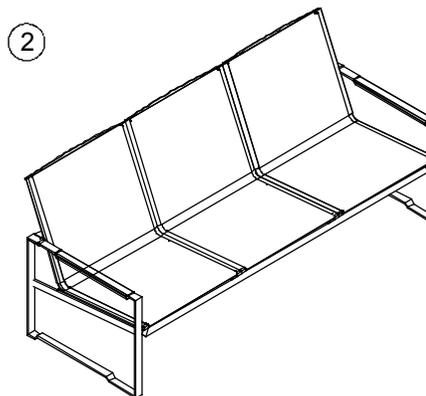


A JCBC M6x15mm

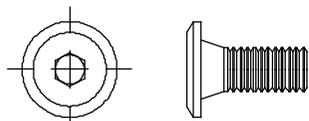


6 PCS

B Flat Head M6x50mm




2 PCS

C Flat Head M6x15mm

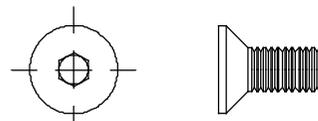

2 PCS

D PE Washer \varnothing 8

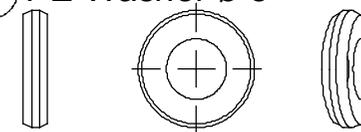

2 PCS